

HARKEN®

INSTRUCTION SHEET

Wire Fairlead Cam Kits

475/298

N15W24983 Bluemound Rd, Pewaukee, WI 53072-4974
Telephone: (262) 691-3320 • Fax: (262) 701-5780
Web: www.harken.com • E-mail: harken@harken.com


Part No.	Size	Fasteners Spacing	Min Line Ø	Max Line Ø
Cam-Matic® Cam Cleats				
150	#10 FH 5mm FH	1 ¹ / ₂ " 38mm	1/8" 3mm	1/2" 12mm
468 Micro	#8 TH 4mm TH	1 ¹ / ₁₆ " 27mm	3/32" 2mm	1/4" 6mm
Carbo-Cams®				
365	#10 FH 5mm FH	1 ¹ / ₂ " 38mm	1/8" 3mm	3/8" 10mm
471 Micro	#8 TH 4mm TH	1 ¹ / ₁₆ " 27mm	1/8" 3mm	1/4" 6mm

FH=Flathead TH=Trusshead

475 Micro Wire Fairlead — Fits 468/471 Cams

Wire fairlead places fairlead ahead of cam.
Holds line at cleat when not in use.

1. Place wire fairlead in base so channel faces down.
2. **Remove thin red cam base on cleat.**
3. Place cam cleat on top of fairlead base and mount cleat. See cam installation instructions.

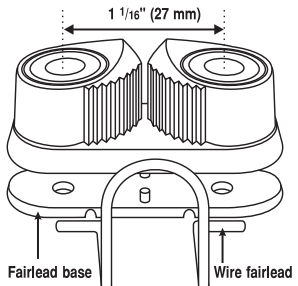


298 Wire Fairlead — Fits 150/365 Cams

Wire fairlead places fairlead ahead of cam. Holds line at cleat when not in use.

1. Place wire fairlead in its base so channel and beveled bosses face up.
2. Sandwich fairlead legs between fairlead base and cleat.

Thin red plastic cam base must remain on cleat.

3. Place cam cleat on top of fairlead base and mount cleat. See cam installation instructions.

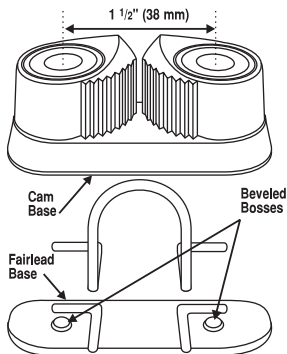

Additional information:
www.harken.com/manuals

Maintenance

Harken equipment requires minimal maintenance, but some is required to give the best service and to comply with Harken's limited warranty.

It is important to keep equipment clean by frequent flushing with fresh water. In corrosive atmospheres, stainless parts may show discoloration around holes, rivets and screws. This is not serious and may be removed with a fine abrasive.

IMPORTANT! Exposure to some teak cleaners and other caustic solutions can result in discoloration of part and is not covered under the Harken warranty.

Warranty

For additional safety, maintenance and warranty information see www.harken.com/manuals or the Harken® catalog.