


# Installation and Maintenance Manual

MRW-02

## Powered Radial Winch 50.2 ST E/HY

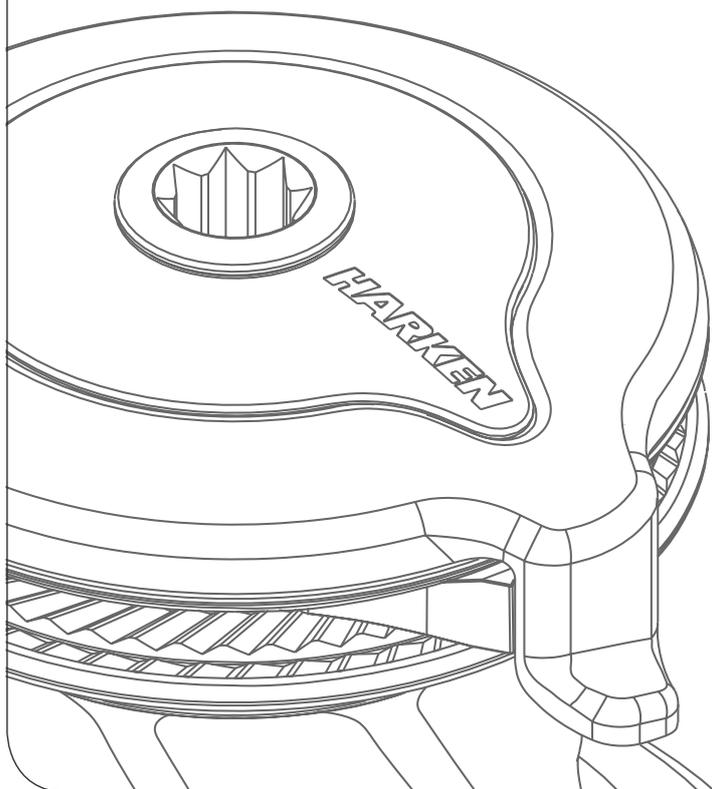

**HARKEN**<sup>®</sup>

|  |    |
|--|----|
| <b>Introduction</b>                                  | 3  |
| <b>Technical characteristics</b>                     | 3  |
| <i>Performance data</i>                              | 3  |
| <i>Weight</i>  | 3  |
| <i>Maximum working load</i>                          | 4  |
| <b>Outline</b>                                       | 4  |
| <i>Winch 50.2 ST E/HY</i>                            | 4  |
| <i>Horizontal electric motor</i>                     | 4  |
| <i>Vertical electric motor</i>                       | 5  |
| <i>Hydraulic motor</i>                               | 5  |
| <b>Installation</b>                                  | 6  |
| <i>Procedure 1</i>                                   | 7  |
| <i>Procedure 2</i>                                   | 8  |
| <i>Winch installation procedure</i>                  | 10 |
| <i>Positioning the self-tailing arm</i>              | 11 |
| <i>Motor installation procedure</i>                  | 11 |
| <i>Electric wiring diagrams</i>                      | 12 |
| <i>Hydraulic connections diagram</i>                 | 14 |
| <b>Maintenance</b>                                   | 16 |
| <i>Washing</i>                                       | 16 |
| <i>Maintenance table</i>                             | 16 |
| <i>Winch disassembly procedure</i>                   | 16 |
| <i>Winch exploded view with maintenance products</i> | 20 |
| <i>Winch assembly</i>                                | 21 |
| <b>Harken® limited worldwide warranty</b>            | 22 |
| <b>Ordering spare parts</b>                          | 22 |
| <b>Exploded view</b>                                 | 23 |
| <i>Winch 50.2 ST E/HY</i>                            | 23 |
| <i>Horizontal electric motor</i>                     | 27 |
| <i>Vertical electric motor</i>                       | 28 |
| <i>Hydraulic motor</i>                               | 29 |
| <b>Parts list</b>                                    | 25 |
| <i>Radial Winch 50.2 STA E/HY</i>                    | 25 |
| <i>Radial Winch 50.2 STC E/HY</i>                    | 26 |
| <i>Horizontal electric motor</i>                     | 27 |
| <i>Vertical electric motor</i>                       | 28 |
| <i>Hydraulic motor</i>                               | 29 |

## Introduction

This manual gives technical information on winch installation and maintenance, including disassembling and reassembling.

This information is DESTINED EXCLUSIVELY for specialised personnel or expert users.

Installation, disassembling and reassembling of the winch by personnel who are not experts may cause serious damage to users and those in the vicinity of the winch.

Harken® accepts no responsibility for defective installation or reassembly of its winches.

In case of doubt the Harken® Tech Service is at your disposal at [techservice@harken.it](mailto:techservice@harken.it)

This Manual is available only in English. If you do not fully understand the English language, do not carry out the operations described in this Manual.

## Technical characteristics

|           | Power ratio | Gear ratio |
|-----------|-------------|------------|
| 1st speed | 10,90 : 1   | 2,40 : 1   |
| 2nd speed | 50,40 : 1   | 10,90 : 1  |

*The theoretical power ratio does not take friction into account.*

### Performance data

#### Winch 50.2 ST E (electric)

|                      | horizontal motor |           |               |           | vertical motor |           |               |           |
|----------------------|------------------|-----------|---------------|-----------|----------------|-----------|---------------|-----------|
|                      | 12 V (1500 W)    |           | 24 V (2000 W) |           | 12 V (1500 W)  |           | 24 V (2000 W) |           |
|                      | 1st speed        | 2nd speed | 1st speed     | 2nd speed | 1st speed      | 2nd speed | 1st speed     | 2nd speed |
| line speed (m/min)** | 32,7             | 7,2       | 39,4          | 8,7       | 37,4           | 8,2       | 45,1          | 9,9       |
| max load (Kg)        | 328              | 1494      | 341           | 15519     | 323            | 1472      | 335           | 1526      |

\*\*Line speed is measured with no load

|          |     | motor nominal power (W) |            | current absorption at winch MWL (A) |      |
|----------|-----|-------------------------|------------|-------------------------------------|------|
|          |     | 12 V                    | 24 V       | 12 V                                | 24 V |
|          |     | winch 50.2 ST E         | horizontal | 1500                                | 2000 |
| vertical | 225 | 125                     |            |                                     |      |

#### Winch 50.2 ST HY (hydraulic)

|                     | 1st speed | 2nd speed |
|---------------------|-----------|-----------|
| line speed (m/min)* | 55,9      | 12,3      |
| max load (Kg)*      | 344       | 1564      |

\*at 120 bar with a 20 L/min oil flow (5,28 Gal/min)

Weight

|             | ST A EH | ST C EH | ST A EV | ST C EV | ST A H | ST C H |
|-------------|---------|---------|---------|---------|--------|--------|
| weight (Kg) | 16,8    | 20      | 17,5    | 20,7    | 13,5   | 16,7   |

Versions:

A = drum in anodised aluminium

C = drum in chromed bronze

EH = horizontal electric winch

EV = vertical electric winch

H = vertical hydraulic winch

Maximum working load




**WARNING!**


The maximum working load (MWL) for the 50.2 ST E/HY Radial Winch is 1450 Kg (3197 lb). Subjecting the winch to loads above the maximum working load can cause the winch to fail or pull off the deck suddenly and unexpectedly during high loads causing severe injury or death.



**Outline**

Winch 50.2 ST E/HY

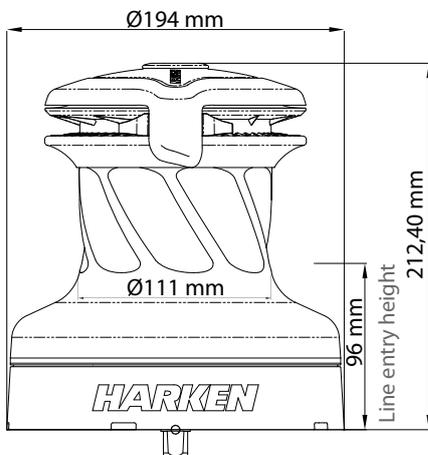

Horizontal electric motor (12 V / 24 V)

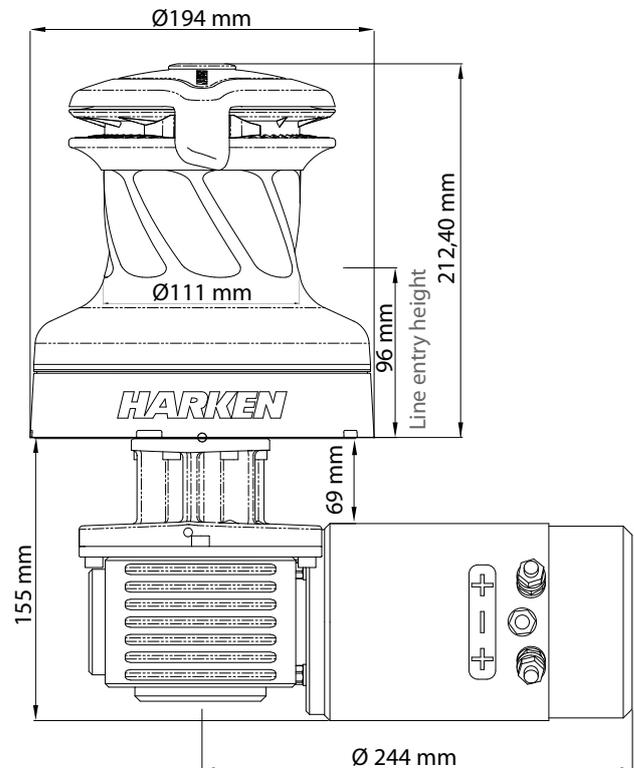

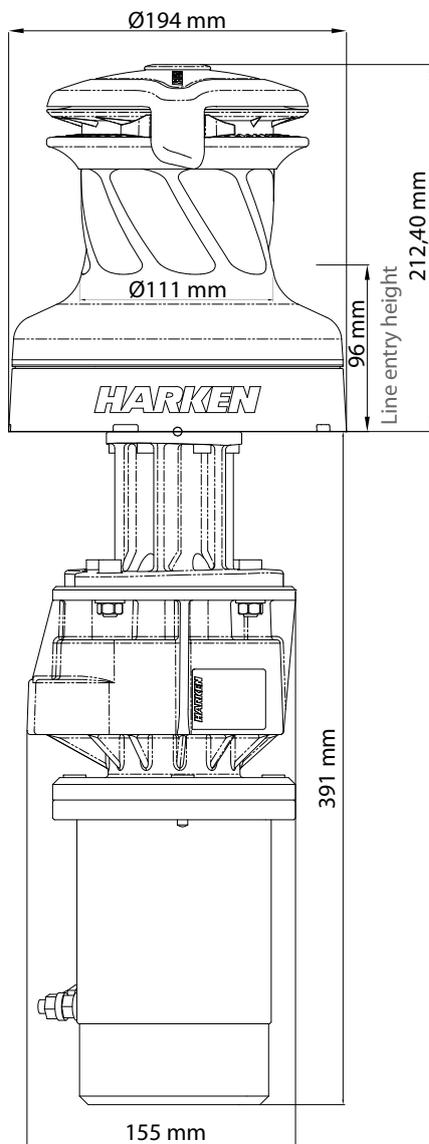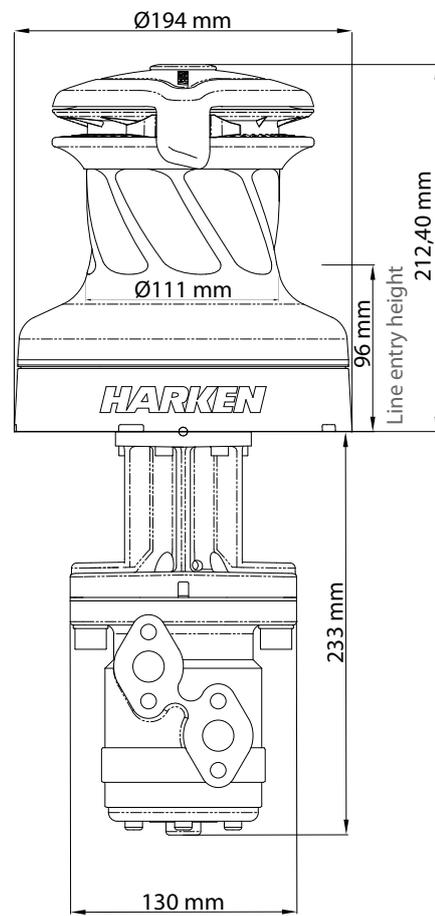Vertical electric motor (12 V / 24 V)Hydraulic motor

## Installation

The winch must be installed on a flat area of the deck, reinforced if necessary to bear a load equal to at least twice the maximum working load of the winch.

It is the installer's responsibility to carry out all structural tests needed to ensure that the deck can bear the load.

Harken® does not supply the screws needed to install the winch since these may vary depending on the deck on which it is to be installed.

It is the installer's responsibility to choose the correct screws taking account of the loads they will have to bear.

Harken® assumes no responsibility for incorrect installation of its winches or for an incorrect choice of mounting screws.

### DANGER!

Incorrect installation of the winch may cause severe injury or death. Consult the yard that built the boat in the case of doubt over the correct positioning of the winch.



### WARNING!

Failure to use the correct number and type of mounting fasteners or failure to ensure the correct deck strength can result in the winch pulling off the deck suddenly and unexpectedly during high loads causing severe injury or death.



### WARNING!

Verify the entry angle of the sheet. This must be  $8^\circ$  with tolerance of  $\pm 2^\circ$ , to avoid sheet overrides and damaging the winch or making the winch inoperable leading to loss of control of the boat which can lead to severe injury or death.




### WARNING!

Mount the winch on the deck so that the final drive gear is positioned where the sheet enters the winch drum. Incorrect position of drive gear can weaken winch leading to failure which can cause an accident leading to severe injury or death.

### NOTICE

You can find the icon ▲ on the skirt to identify the drive gear position.

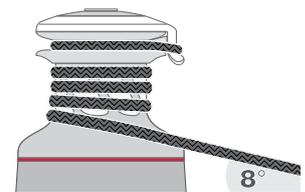

After correctly positioning the final drive gear with respect to the load, check that the motor, gearing, electrical wiring and/or hydraulic pipes can be housed below decks. To help find the optimal compromise, remember that, to make the installation of the motor easier, it can be coupled to the winch in any one of four different positions that differ by  $60^\circ$  from each other.

Once you have decided the correct mounting position for the winch on the deck and checked the space available below deck, proceed with the installation.

The winch can be installed following one of the two procedures below (**Procedure 1** or **Procedure 2**):

### Procedure 1

To install the winch you must remove the drum and use Socket Head (SH) bolts.

Tools needed

 One medium flat-bladed screwdriver

To identify the various parts, refer to the exploded view at the end of this Manual.

 Torque to apply when assembling



1. Pull out the disconnect rod n°32



2. Unscrew the central screw ( $\approx$  2Nm/18 in-lb)



3. Slide off the assy socket n°31 and the cover n°30.  
Pay attention to the o-ring in the socket.



4. Unscrew the three screws n°29  
( $\approx$  4Nm/35 in-lb)



5. Remove the stripper arm n°28 by rotating and lifting it.



6. Lift off the drum n°24

Install the winch on the deck in the position you have chosen, keeping in mind the limits described on page 6 and using socket head (SH) bolts.  
(See paragraph on installation)

Procedure 2

To install, you must remove the winch skirt and use hexagonal headed bolts.

Tools needed

 One medium flat-bladed screwdriver

To identify the various parts, refer to the exploded view at the end of this Manual.



1. Remove the skirt n°2 with the help of the screwdriver placed as shown by the symbol 



2. Take off the base n°2



3. Position the 5 M8 hexagonal headed bolts in their holes



4.



5. Reposition the skirt n°2 in its housing



6. Press down the skirt to position it correctly

#### **NOTICE**

Make sure the skirt is correctly clipped on to the base of the winch.

Install the winch on the deck in the position you have chosen, keeping in mind the limits described on page 6 and using hexagonal headed bolts.  
(See paragraph on winch installation)

## Winch installation procedure

Carry out **Procedure 1** or **Procedure 2**, then install the winch on the deck in the chosen position.


### NOTICE

Before drilling the deck, check the space available below deck for the flange and the motor

- A.** Position the base of the winch on the deck and mark the position of the holes or use the drilling cut-out template at the point where you have decided to place the winch.

Below is a reduced scale diagram.

The drilling cut out template is available on the Harken® website, [www.harken.com](http://www.harken.com)

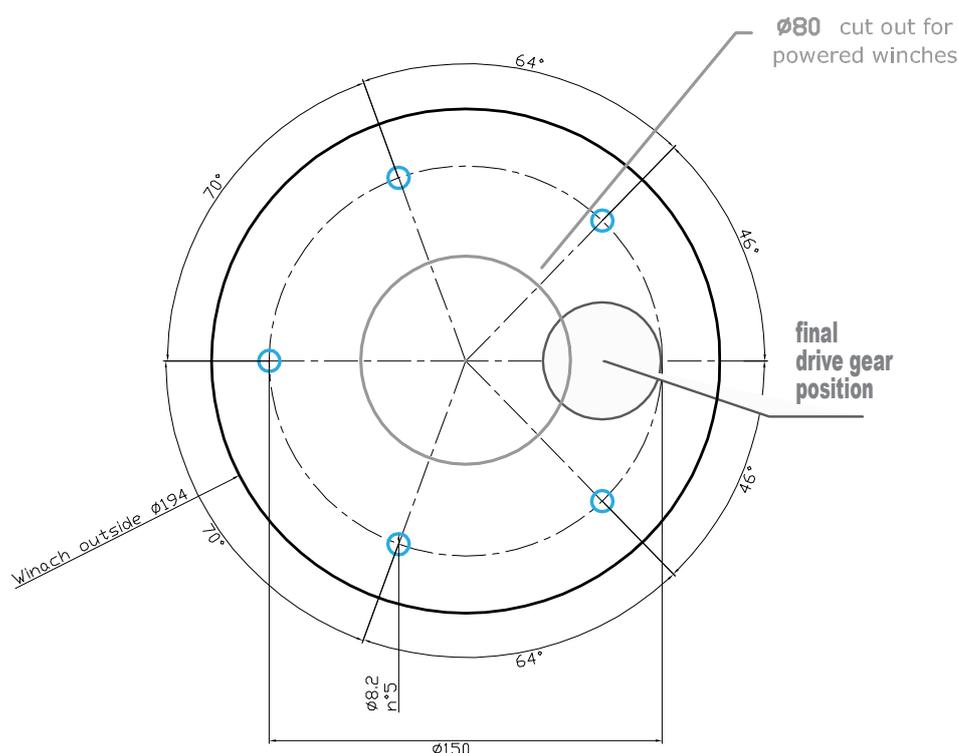

- B.** Remove the winch and drill the five 8.2 mm diameter holes.
- C.** Bolt the base of the winch to the deck using five M8 Socket Head (SH) bolts for Procedure 1 or five hexagonal headed M8 bolts for Procedure 2 (neither is supplied by Harken®), correctly chosen for the thickness and type of the boat deck. Consult the yard that built the boat in case of doubt.



### WARNING!

To install the winch on the deck, use only bolts in A4 stainless steel (DIN 267 part11). Bolts made of other materials may not have sufficient strength or may corrode which can result in winch pulling off deck suddenly and unexpectedly during high loads causing severe injury or death.

### NOTICE

To mount winches on the deck, do not use countersunk bolts.

- D.** Fill the mounting holes with a suitable marine sealant.
- E.** Remove the excess adhesive/sealant from the holes and base drainage channels

F. Reassemble the winch following the steps in **Procedure 1** or **Procedure 2** in the reverse order, and apply the products indicated in the section on maintenance.

**NOTICE**

Before closing the winch, make sure the holes and drainage channels in the base of the winch are not obstructed.

*Positioning the self-tailing arm*

Position the self-tailing arm so that the line leaving the winch is led into the cockpit.

## Motor installation procedure

Once you have installed the winch on the deck, proceed with motor installation. The motor can be coupled to the winch in different positions. Check the space available below deck and choose the suitable position.

*Tools needed*

-  A number five hex key
-  A number six hex key (only for vertical electric motor)
-  A number ten hex key (only for hydraulic motor)
-  Two number thirteen wrenches



1. Position the flange (see Page 12)



2. Tighten the six screws (8 Nm/ 71 in-lb)



3. Position the reduction gear and motor



4. Tighten the two screws (8 Nm/ 71 in-lb). Be sure to align the flange.

**NOTICE**

Before positioning the flange, check to make sure that seal is seated correctly.



After winch is assembled and before sailing, test the powered winch functioning: insert the lock-in winch handle in the handle socket and check that the disconnect rod must disconnect gearbox.

Electric wiring diagrams

To guarantee greater efficiency in terms of safety and long life, for certain winch models it is obligatory to install the WLC 200R Load Controller.




**WARNING!** Consult the table below to check for which winch models it is obligatory to install the WLC200R and for which it is recommended.

| WINCH<br>RADIAL | Horizontal motor |            | Vertical motor |            |
|-----------------|------------------|------------|----------------|------------|
|                 | 12 V             | 24 V       | 12 V           | 24 V       |
| 50.2            | recommended      | obligatory | obligatory     | obligatory |


For more information, refer to the WLC200R Manual.

Refer to the following diagrams for the electric wiring:


Horizontal 12 V / 24 V motor installed without WLC200R

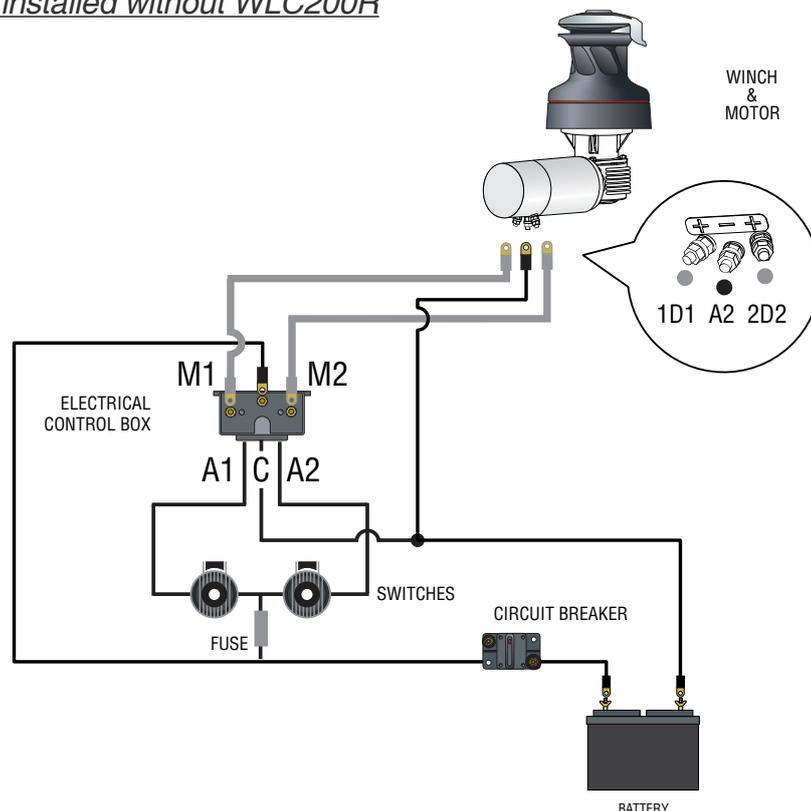


*Horizontal 12 V / 24 V motor in right-hand configuration installed with WLC200R*

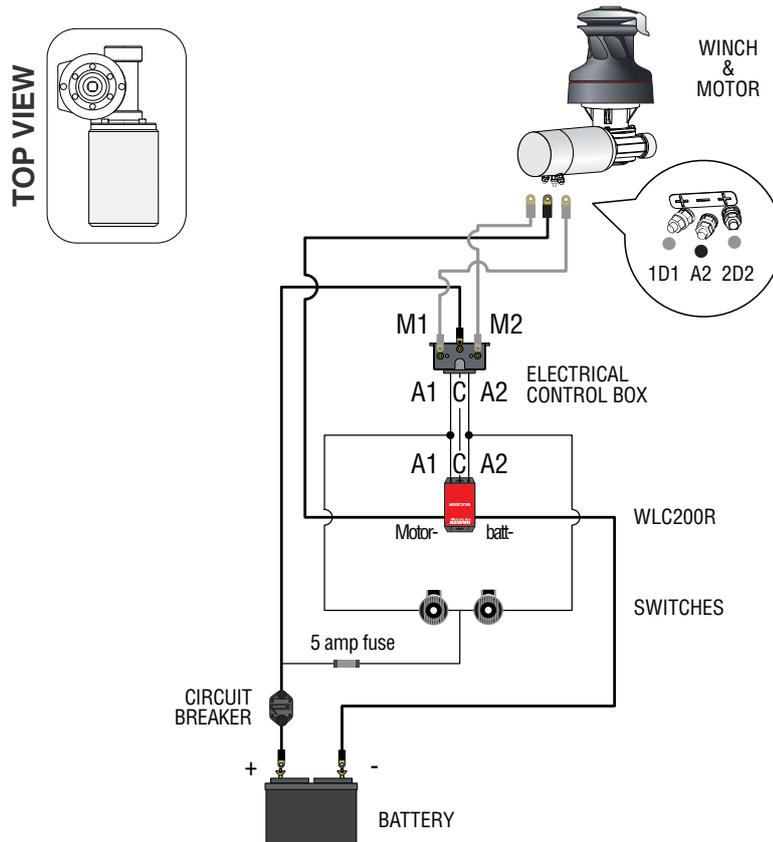

*Horizontal 12 V / 24 V motor in left-hand configuration installed with WLC200R*

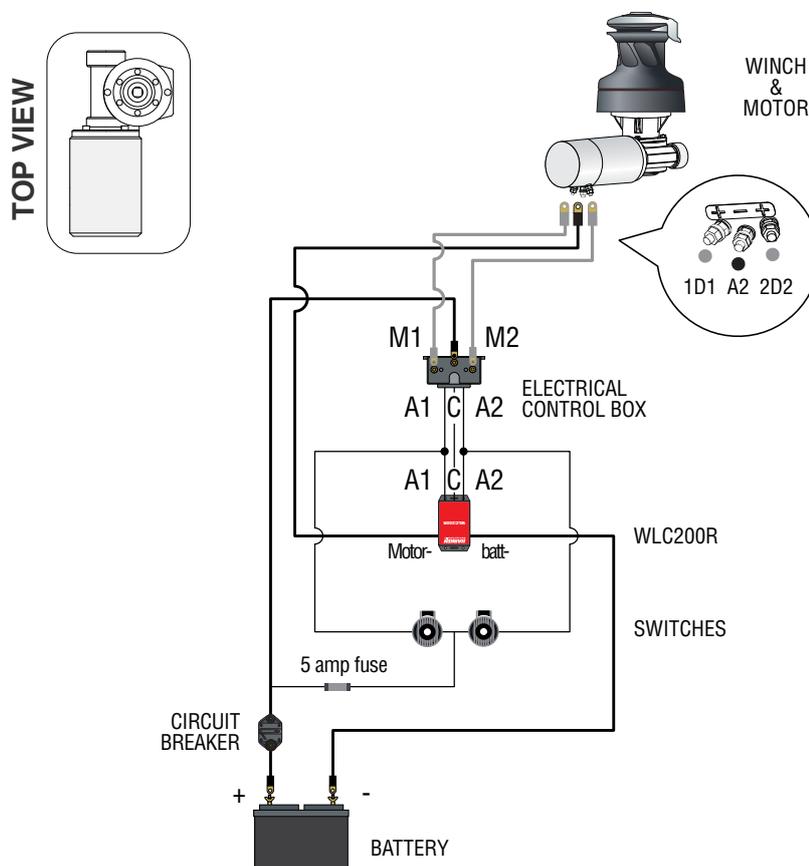

Vertical 12 V / 24 V motor with WLC200R

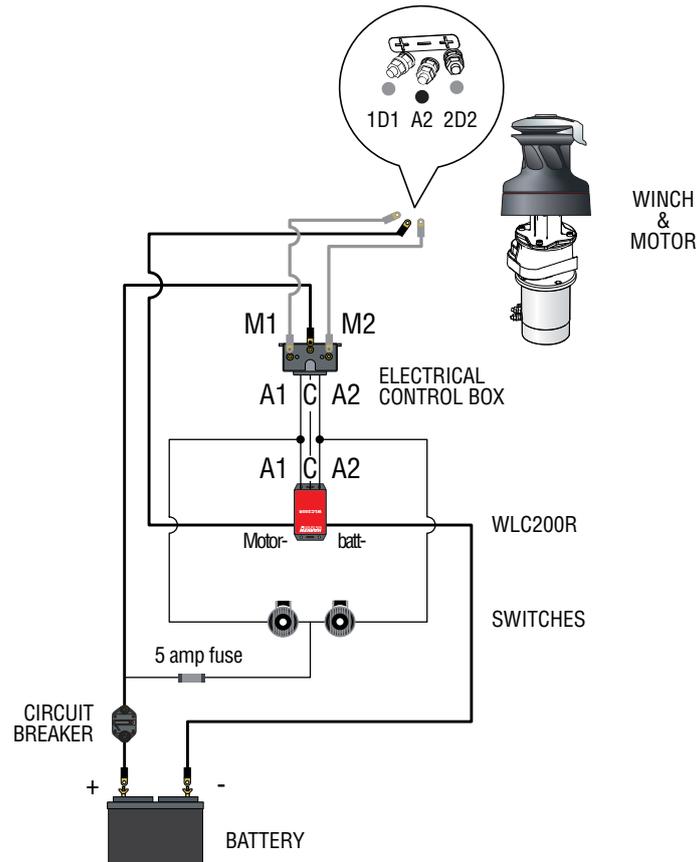

Fasten electric control box containing solenoids to bulkhead or wall. Install remote circuit breaker between power supply and electric control box. Locate push-buttons on deck in a convenient spot for easy winch operation.

Refer to the following chart for wire size:

Total distance between winch and battery

| Winch size | Current voltage | Under 16.4 ft<br>AWG | Under 5 m<br>mm <sup>2</sup> | 16.4 - 32.8 ft<br>AWG | 5 m - 10 m<br>mm <sup>2</sup> | 32.8 - 49.2 ft<br>AWG | 10 m - 15 m<br>mm <sup>2</sup> | 49.2 - 65.6 ft<br>AGW | 15m - 20 m<br>mm <sup>2</sup> |
|------------|-----------------|----------------------|------------------------------|-----------------------|-------------------------------|-----------------------|--------------------------------|-----------------------|-------------------------------|
| 50.2       | 12 V            | 2                    | 32                           | 0                     | 50                            | 00                    | 70                             | 000                   | 95                            |
| 50.2       | 24 V            | 5                    | 16                           | 3                     | 25                            | 2                     | 35                             | 0                     | 50                            |

**NOTICE**

To connect motor, attach cable terminals to clamps between nut and lock nut. Hold nut in contact with motor using a spanner and tighten other nut with second spanner. Take special care not to turn the central spindles. Be careful not to turn central spindles. These instructions apply when assembling and disassembling. We recommend using a torque wrench so as to obtain a torque equal to and no greater than 10 Nm (88 in-lb).



**NOTICE**

Note that correct electrical contact sequence is:  
Nut – Cable Terminal – Self-Locking Washer – Lock Nut



Hydraulic connections diagram


The hydraulic motor must to be connected to a hydraulic system using two high-pressure tubes which serve for input or output according to the direction in which the motor will be run. The motor also needs a third connection with a low pressure tube for drainage, so that excess oil can return to the main tank to avoid shortening the life of the motor. This motor uses an open centre valve.

Refer to the following chart for the hydraulic system:

For the hydraulic motor:

Input/output pipe thread: G 1/2 – depth 15 mm

Drainage pipe thread: G 1/4 – depth 12 mm

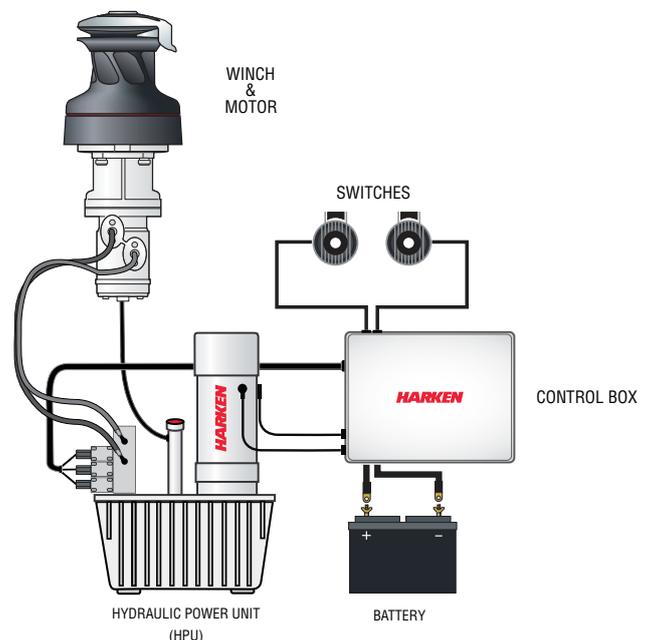

## Maintenance

### Washing

Winches must be washed frequently with fresh water, and in any case after each use. Do not allow teak cleaning products or other cleaners containing caustic solutions to come into contact with winches and especially anodised, chrome plated or plastic parts. Do not use solvents, polishes or abrasive pastes on the logos or stickers on the winches. Make sure that the holes and drainage channels in the base of the winch are not obstructed so that water does not collect.

### Maintenance table

Winches must be visually inspected at the beginning and end of every season of sailing or racing. In addition they must be completely overhauled, cleaned and lubricated at least every 12 months. After an inspection, replace worn or damaged components. Do not replace or modify any part of the winch with a part that is not original.

**WARNING!**

Periodic maintenance must be carried out regularly. Lack of adequate maintenance shortens the life of the winch, can cause serious injury and also invalidate the winch warranty. Installation and maintenance of winches must be carried out exclusively by specialized personnel.

In the case of doubt contact Harken® Tech Service at [techservice@harken.it](mailto:techservice@harken.it)

**WARNING!**

Make sure that the power is switched off before installing or carrying out maintenance on the winch.

### Winch disassembly procedure

#### *Tools needed*

-  *One medium flat-bladed screwdriver*
-  *A number six hex key*
-  *Brush*
- Rags*

To identify the various parts refer to the exploded view at the end of this Manual.

 Torque to be applied in assembly phase

Carry out **Procedure 1** as shown in the paragraph on winch installation and then do the following:



7. Completely unscrew the three screws n° 29 and remove the stripper arm support n°23



8. Slide out the central shaft n°21



9. Unscrew the 5 hex screws n°18  
( 20Nm/177 in-lb)



10. Remove the assy housing n°17  
Important: washer n°14 may remain inside the drum support!



11. Remove the gear n°16



12. Remove the washer n°14



13. Remove the gear n°10



14. Remove the pawls carrier n°7



15. Remove the gear n°3



16. Remove the pinion n°11. To facilitate the operation press the spring against the pawl with a blade



17. Slide off gear n°6

If it is necessary to replace any **jaws** of the winch, proceed as follows:



I. Unscrew the 4 screws n°27  
( $\approx$ 4Nm/35 in-lb)



II. Remove the jaws n°26

Once the winch is completely disassembled, clean the parts: use a basin of diesel oil to soak metal components and rinse plastic parts in fresh water. Once you have done this, dry the parts with cloths that do not leave residue.

Inspect gears, bearings, pins and pawls for any signs of wear or corrosion.

Carefully check the teeth of gears and ring gears to make sure there are no traces of wear.


Check the roller bearings and check there are no breaks in the bearing cages.  
Replace worn or damaged components.

Carry out maintenance on components using the products listed below.  
For more information on which products to use where, refer to the exploded diagram below.

Use a brush to lightly lubricate all gears, gear pins, teeth and all moving parts with grease.  
Lightly lubricate the pawls and springs with oil. Do not use grease on the pawls!

---

*Winch exploded view with maintenance products*

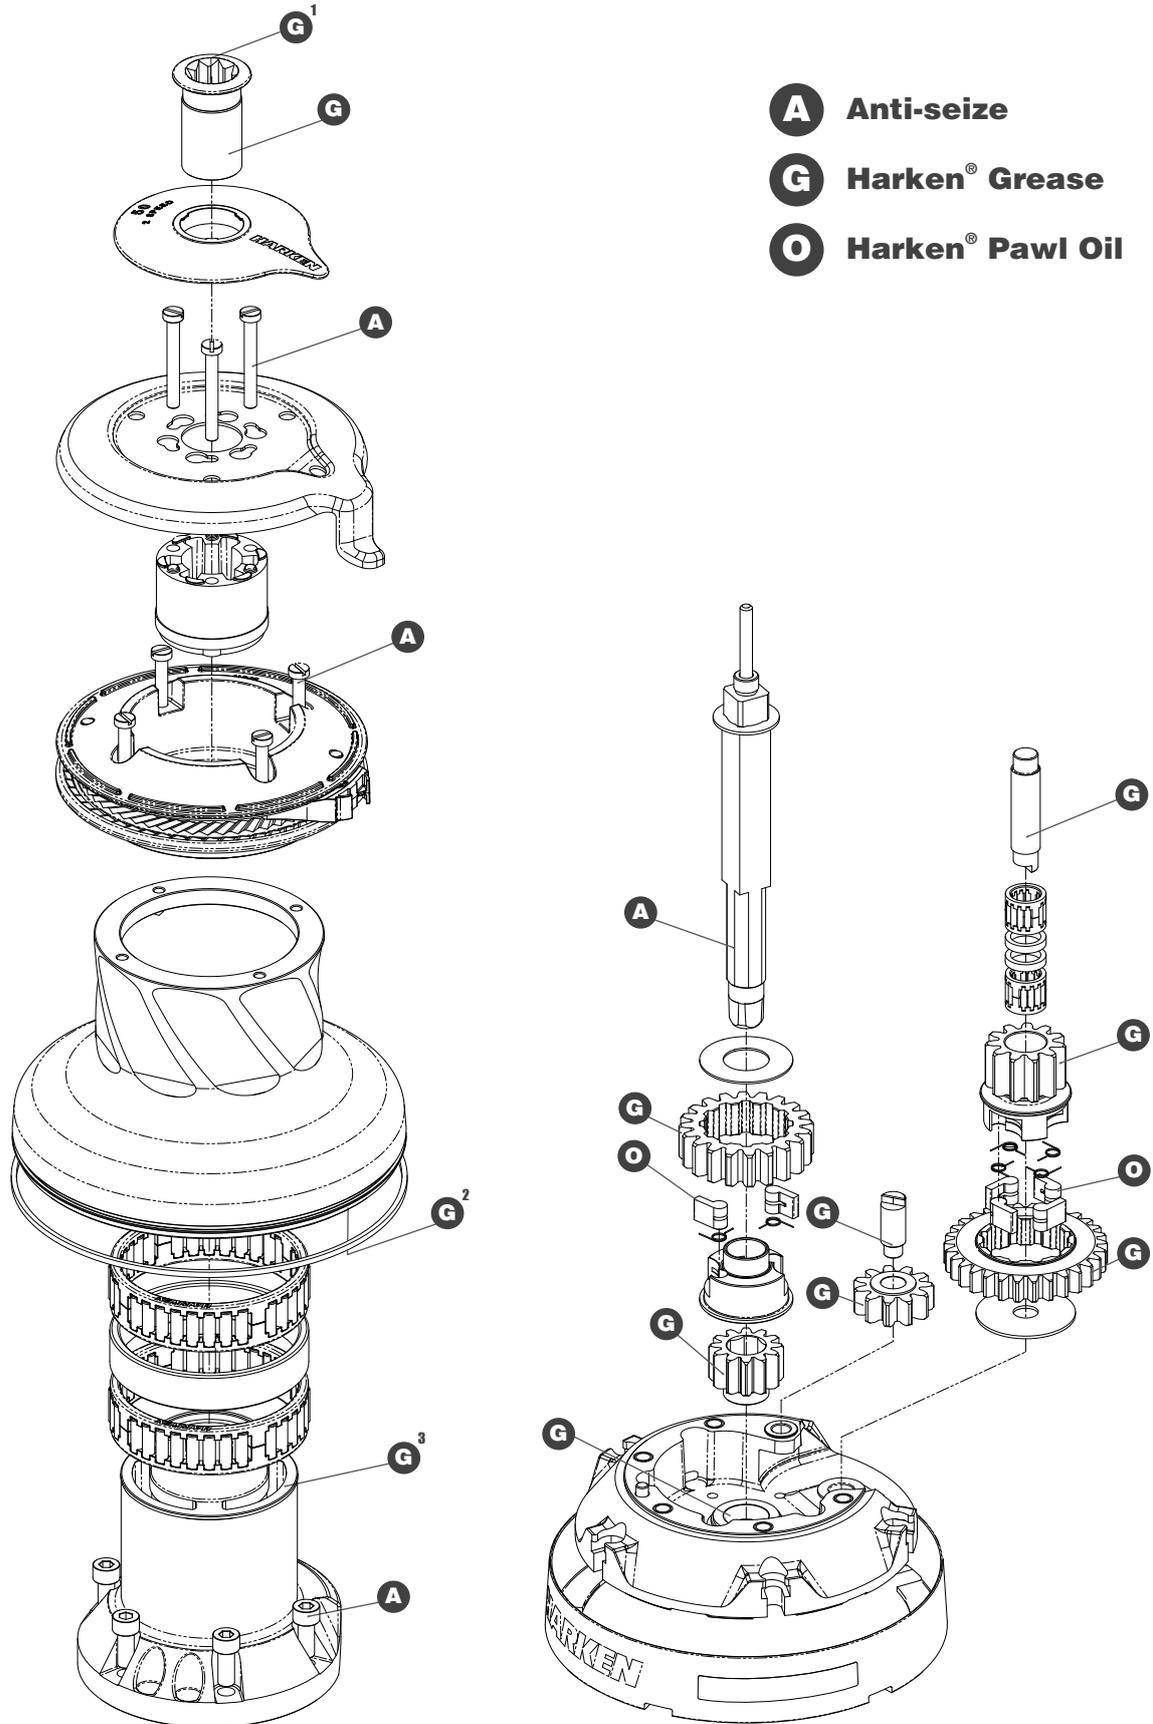

<sup>1</sup>Apply Harken® grease on assy socket screw  
<sup>2</sup>Apply Harken® grease on drum gear  
<sup>3</sup>Apply Harken® grease on the middle step of assy housing


Winch assembly

Make sure that the holes and drainage channels in the base of the winch are not obstructed. Assemble the winch in the reverse order of the sequence in the section on disassembly.


To tighten bolts, use the torque indicated in the disassembly procedure.



When positioning the stripper arm, align the peeler with it.

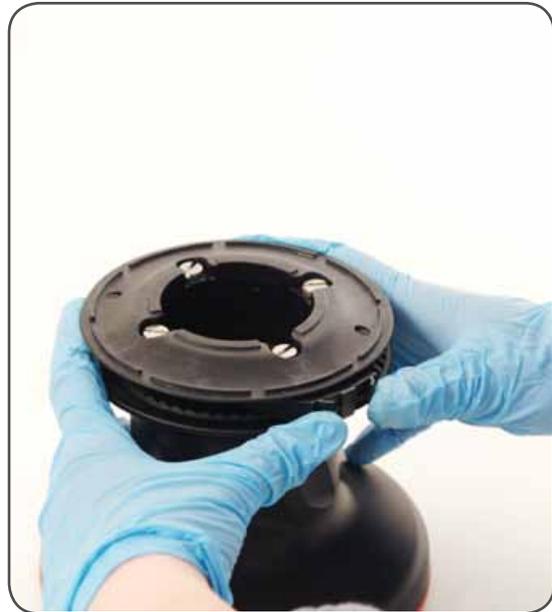


If the jaws have been disassembled, insert peeler between the two jaws, taking care that the letters TOP on the peeler are facing upwards.

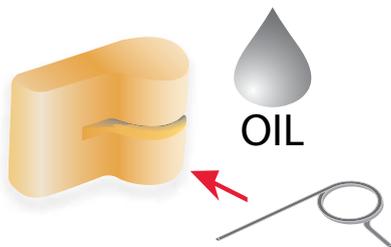

**To assemble the pawls:**

correctly position the spring in its housing as shown at left. Hold the spring closed and slide the pawl into its housing. Once in position, check that the pawls can be easily opened and closed with a finger.

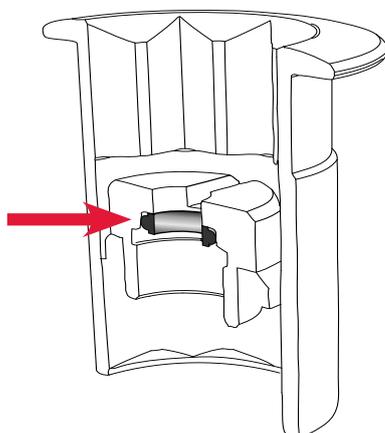

**NOTICE**

Before screw the central screw, check the correct position of the o-ring in the assy socket.

In case of doubt concerning the assembly procedure contact Harken® Tech Service: [techservice@harken.it](mailto:techservice@harken.it)

## **Harken® limited worldwide warranty**

Refer to the Harken® Limited Worldwide Warranty in the Harken® Catalogue and on the website [www.harken.com](http://www.harken.com)

## **Ordering spare parts**

Spare parts can be requested from Harken® as described in the Harken® Limited Worldwide Warranty, indicating the part number in the Parts List and including the serial number of the winch for which the parts are required.

***The serial number of the winch is printed on a plate on the drum support of the winch.***



### **Manufacturer**

#### **Harken® Italy S.p.A.**

Via Marco Biagi, 14  
22070 Limido Comasco (CO) Italy  
Tel: (+39) 031.3523511  
Fax: (+39) 031.3520031  
Email: [info@harken.it](mailto:info@harken.it)  
Web: [www.harken.com](http://www.harken.com)

- **Tech Service**  
Email: [techservice@harken.it](mailto:techservice@harken.it)
- **Customer Service**  
Tel: (+39) 031.3523511  
Email: [info@harken.it](mailto:info@harken.it)


### **Headquarters**

#### **Harken®, Inc.**


1251 East Wisconsin Avenue  
Pewaukee, Wisconsin 53072-3755 USA  
Tel: (262) 691.3320  
Fax: (262) 691.3008  
Email: [harken@harken.com](mailto:harken@harken.com)  
Web: [www.harken.com](http://www.harken.com)

- **Tech Service**  
Email: [technicalservice@harken.com](mailto:technicalservice@harken.com)
- **Customer Service**  
Tel: (262) 691-3320  
Email: [customerservice@harken.com](mailto:customerservice@harken.com)

*Radial Winch 50.2 STA E/HY*

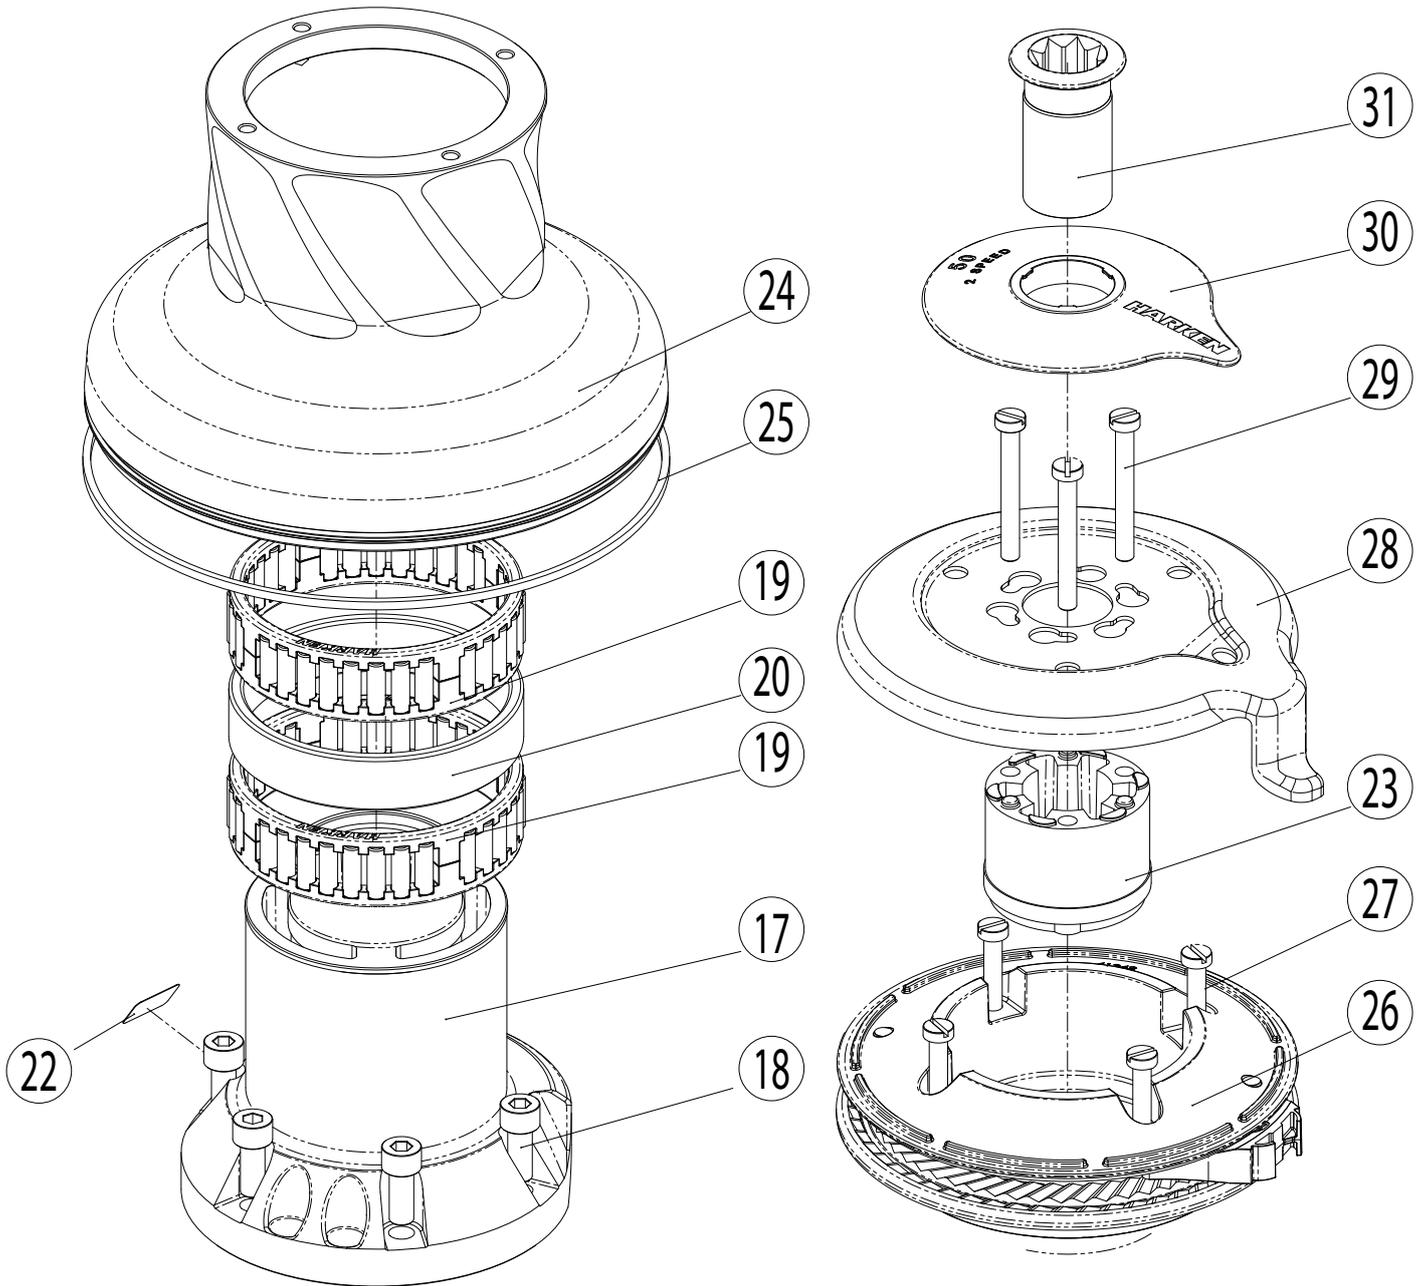

Radial Winch 50.2 STA E/HY

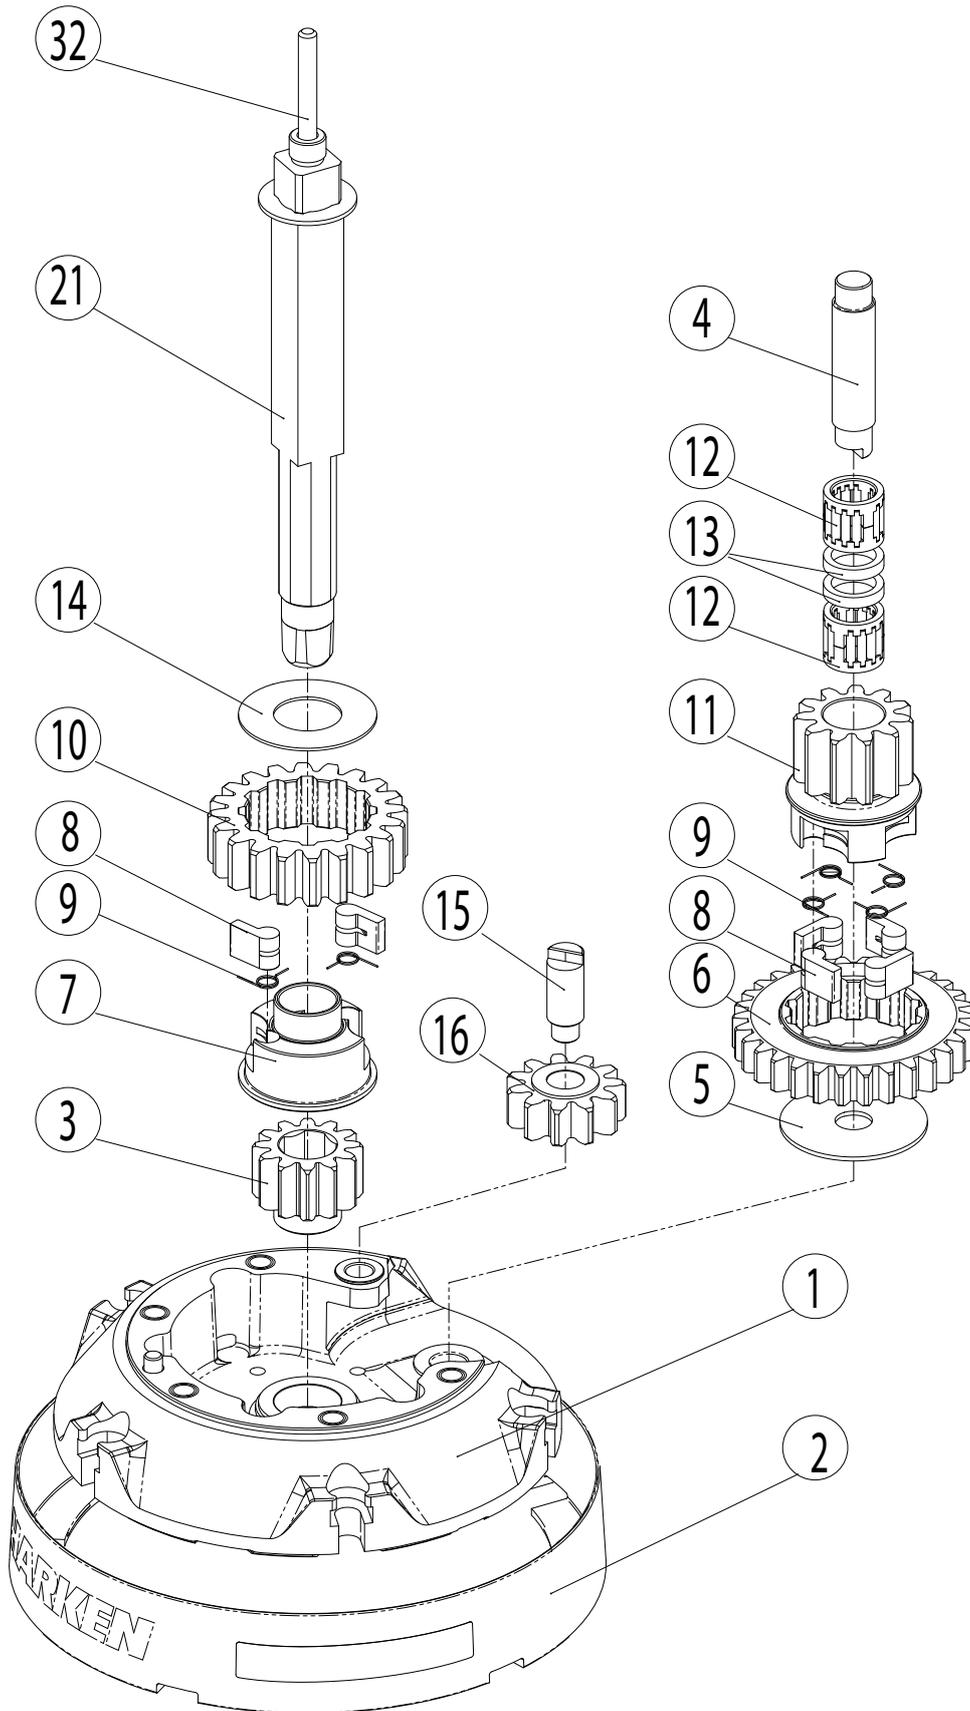

## Radial Winch 50.2 STA E/HY

A= drum in anodised aluminium

| Pos. | Q.ty | Code          | Description   |
|------|------|---------------|---|
| 1    | 1    | A 941898 00   | Assy Base Winch 50 EL/HY<br><i>Winch Serial Number Sticker</i>  |
| 2    | 1    | A 941349 00   | Assy Skirt Winch 50**   |
| 3    | 1    | S 41302 00 04 | Gear Z12  |
| 4    | 1    | S 41605 00 04 | Pin   |
| 5    | 1    | S278170002    | Washer 12.5x48x1.5*   |
| 6    | 1    | S 41280 00 41 | Gear Z30  |
| 7    | 1    | S 41426 00 04 | Pawls Carrier Ø8xN2   |
| 8    | 6    | S 00008 00 03 | Pawl Ø8*  |
| 9    | 6    | S 00038 00 01 | Pawl Spring Ø8*   |
| 10   | 1    | S 41559 00 41 | Gear Z20  |
| 11   | 1    | S 41561 00 04 | Pinion Z11  |
| 12   | 2    | A72821800     | Roller Bearing 14/20/18*  |
| 13   | 2    | S281340080    | Spacer roller bearings*   |
| 14   | 1    | S 41312 00 02 | Washer Ø22.5xØ45x1*   |
| 15   | 1    | S 41307 00 04 | Pin   |
| 16   | 1    | A 941560 00   | Assy Gear Z11   |
| 17   | 1    | A 941348 00   | Assy Housing Winch 50   |
| 18   | 5    | M0643203      | Screw M8x20 UNI5931*  |
| 19   | 2    | A 741351 00   | Bearing Ø85xØ97x26*   |
| 20   | 1    | S 41352 00 80 | Spacer*   |
| 21   | 1    | A 941508 00   | Assy Central Shaft W50  |
| 22   | 1    | S418760063    | Winch Serial Number Sticker   |
| 23   | 1    | S4129400A0    | Stripper arm support  |
| 24   | 1    | S41340 00 53  | Drum A W50  |
| 25   | 1    | S 28169 00 97 | Red line  |
| 26   | 1    | A 941343 00   | Assy Jaws Winch 50<br><i>Lower Jaw W50</i><br><i>Upper Jaw W50</i><br><i>Peeler W46-50</i><br><i>Spring</i>   |
| 27   | 4    | M0601803      | Screw UNI EN ISO 1207:1996 - M6x35 - A4*  |
| 28   | 1    | S 41344 00 19 | Stripper Arm W50  |
| 29   | 3    | M6007103      | Screw M6x50 UNI6107*  |
| 30   | 1    | S 41345 00 A5 | Cover 2 speed W50   |
| 31   | 1    | A 941493 00   | Assy - Socket W35-80 EL/HY<br><i>Nut screw for disconnect rod</i><br><i>Washer Ø25x15x4</i><br><i>Socket Handle W20/80</i><br><i>O ring 2025 series</i> |
| 32   | 1    | S 41507 00 02 | Disconnect Rod W50  |

\*Service kit available; see winch kit section on the website [www.harken.com](http://www.harken.com)

\*\*Winch product sticker



## Radial Winch 50.2 STC E/HY

C=drum in chromed bronze


| Pos. | Q.ty | Code          | Description   |
|------|------|---------------|---|
| 1    | 1    | A 941898 00   | Assy Base Winch 50 EL/HY<br><i>Winch Serial Number Sticker</i>  |
| 2    | 1    | A 941349 00   | Assy Skirt Winch 50**   |
| 3    | 1    | S 41302 00 04 | Gear Z12  |
| 4    | 1    | S 41605 00 04 | Pin   |
| 5    | 1    | S278170002    | Washer 12.5x48x1.5*   |
| 6    | 1    | S 41280 00 41 | Gear Z30  |
| 7    | 1    | S 41426 00 04 | Pawls Carrier Ø8xN2   |
| 8    | 6    | S 00008 00 03 | Pawl Ø8*  |
| 9    | 6    | S 00038 00 01 | Pawl Spring Ø8*   |
| 10   | 1    | S 41559 00 41 | Gear Z20  |
| 11   | 1    | S 41561 00 04 | Pinion Z11  |
| 12   | 2    | A72821800     | Roller Bearing 14/20/18*  |
| 13   | 2    | S281340080    | Spacer roller bearings*   |
| 14   | 1    | S 41312 00 02 | Washer Ø22.5xØ45x1*   |
| 15   | 1    | S 41307 00 04 | Pin   |
| 16   | 1    | A 941560 00   | Assy Gear Z11   |
| 17   | 1    | A 941348 00   | Assy Housing Winch 50   |
| 18   | 5    | M0643203      | Screw M8x20 UNI5931*  |
| 19   | 2    | A 741351 00   | Bearing Ø85xØ97x26*   |
| 20   | 1    | S 41352 00 80 | Spacer*   |
| 21   | 1    | A 941508 00   | Assy Central Shaft W50  |
| 22   | 1    | S418760063    | Winch Serial Number Sticker   |
| 23   | 1    | S4129400A0    | Stripper arm support  |
| 24   | 1    | S413410043    | Drum C W50  |
| 25   | 1    | S 28169 00 97 | Red line  |
| 26   | 1    | A 941343 00   | Assy Jaws Winch 50<br><i>Lower Jaw W50</i><br><i>Upper Jaw W50</i><br><i>Peeler W46-50</i><br><i>Spring</i>   |
| 27   | 4    | M0601803      | Screw UNI EN ISO 1207:1996 - M6x35 - A4*  |
| 28   | 1    | S 41344 00 19 | Stripper Arm W50  |
| 29   | 3    | M6007103      | Screw M6x50 UNI6107*  |
| 30   | 1    | S 41345 00 A5 | Cover 2 speed W50   |
| 31   | 1    | A 941493 00   | Assy - Socket W35-80 EL/HY<br><i>Nut screw for disconnect rod</i><br><i>Washer Ø25x15x4</i><br><i>Socket Handle W20/80</i><br><i>O ring 2025 series</i> |
| 32   | 1    | S 41507 00 02 | Disconnect Rod W50  |

\*Service kit available; see winch kit section on the website [www.harken.com](http://www.harken.com)


\*\*Winch product sticker




Horizontal electric motor

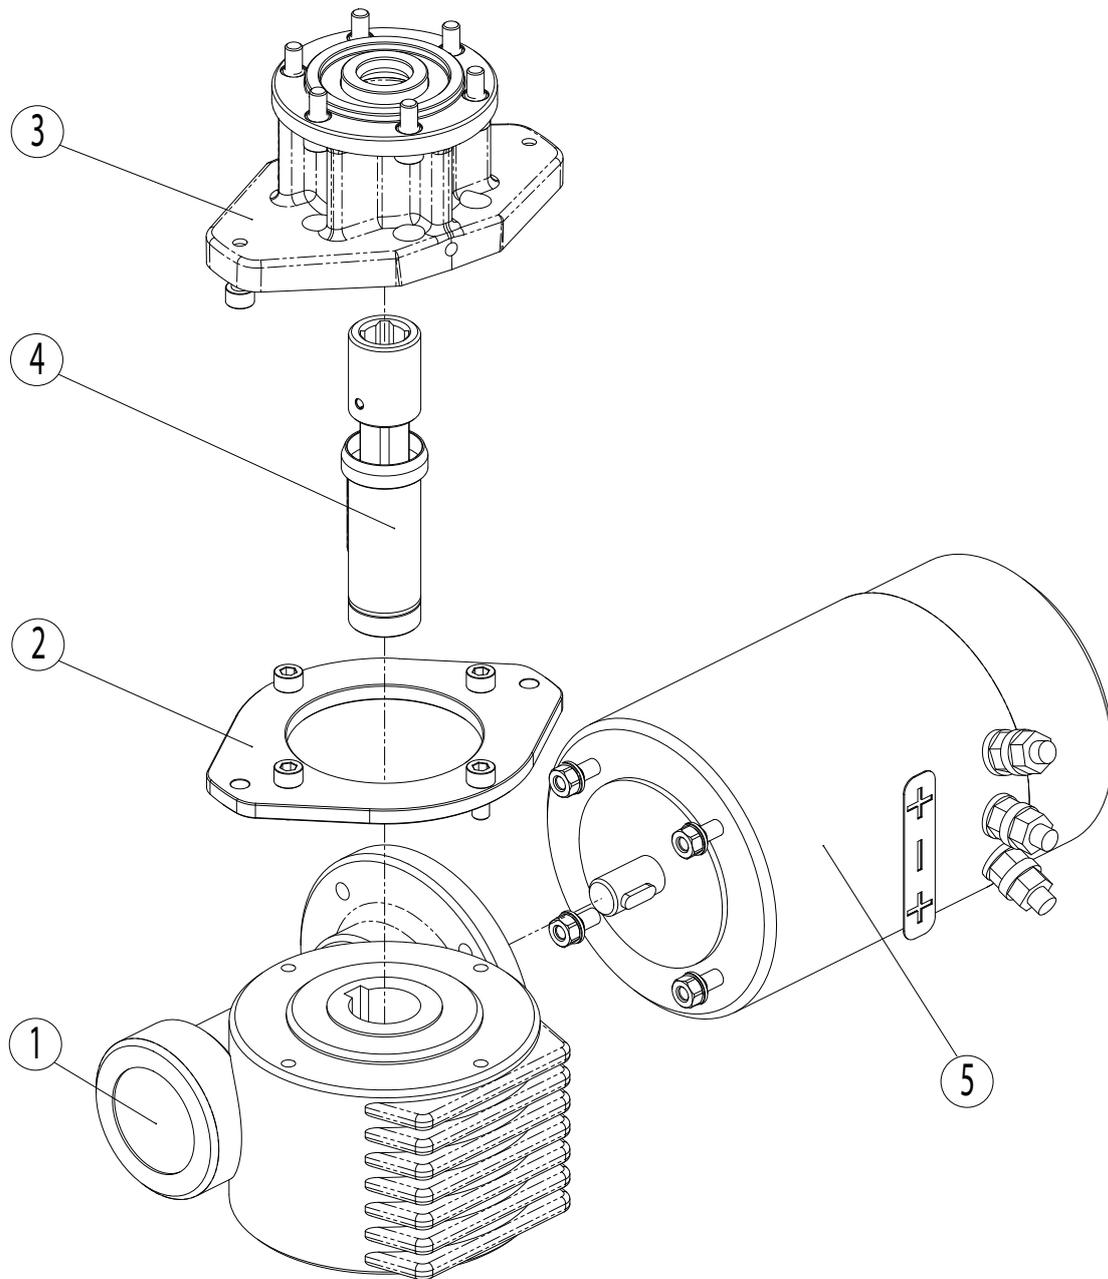

**TOP VIEW**

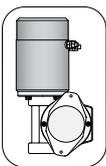


**\* Motor installed in right-hand configuration.**

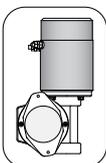

**\*\* Motor installed in left-hand configuration.**


| Pos. | Q.ty | Code                       | Description  |
|------|------|----------------------------|--|
| 1    | 1    | A 931279 00<br>A 941949 00 | KIT Gear Reduction VF49*<br>KIT LM Gear Reduction VF49** |
| 2    | 1    | A 941492 00                | KIT Assy Electric Motor Flange                           |
| 3    | 1    | A 949665 00                | KIT EL HO Motor Flange                                   |
| 4    | 1    | A 949524 00                | KIT EL HO Motor Clutch                                   |
| 5    | 1    | A 960107 00<br>A 960106 00 | KIT EL Motor 12V 1.5kW<br>KIT EL Motor 24V 2kW           |

Vertical electric motor

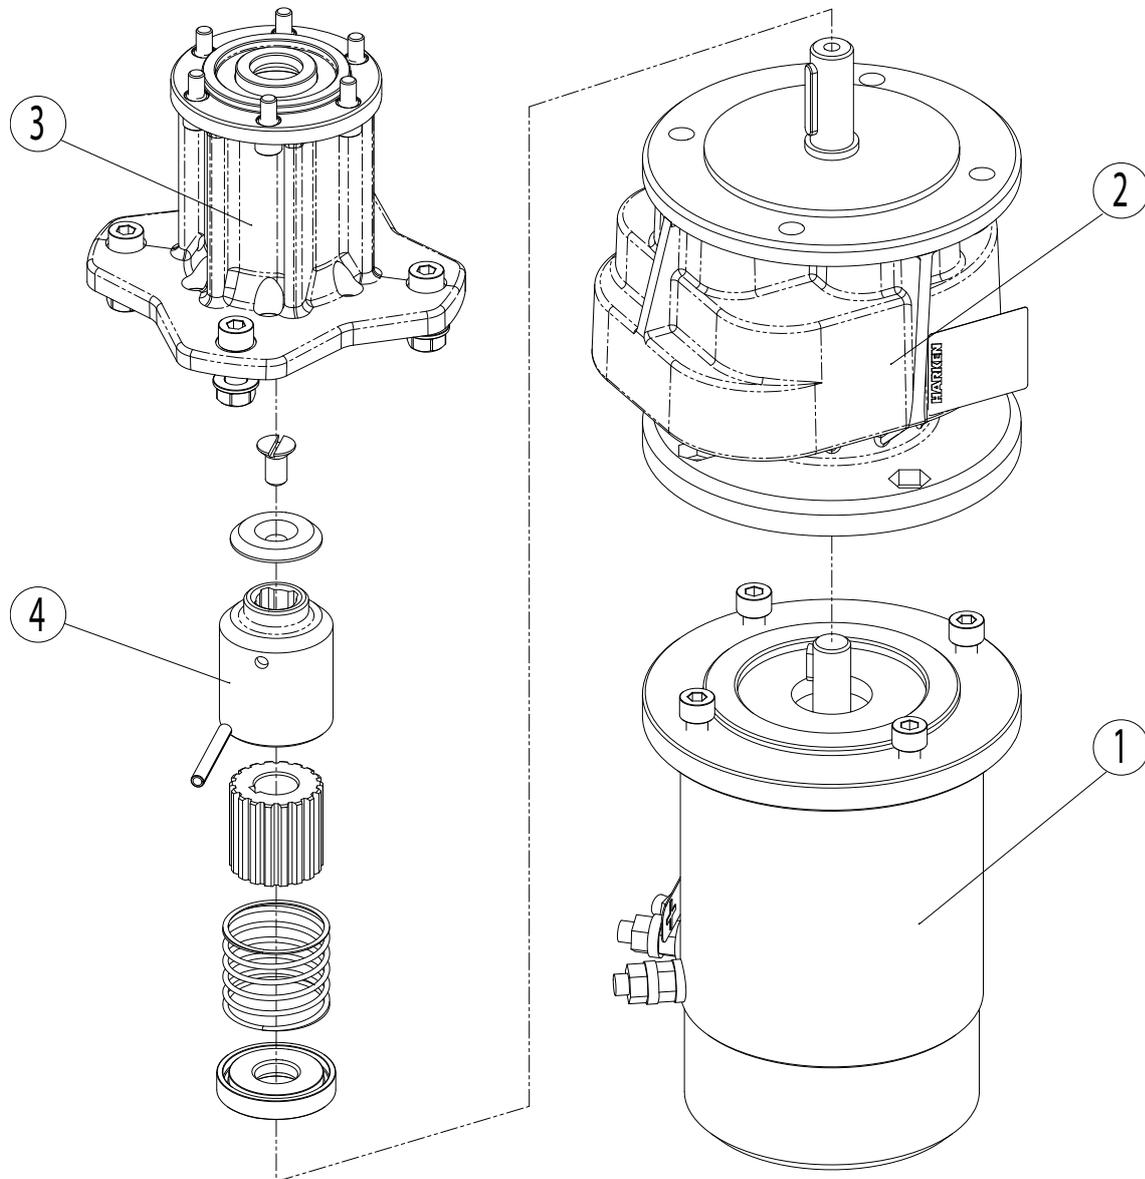

| Pos. | Q.ty | Code                       | Description  |
|------|------|----------------------------|--|
| 1    | 1    | A 960105 00<br>A 960104 00 | KIT EL Motor 12V 1,5kW VT<br>KIT EL Motor 24V 2kW VT |
| 2    | 1    | A 932937 00                | KIT VT Gearbox (AS16F20.96)                          |
| 3    | 1    | A 941505 00                | KIT EL VT Motor Flange                               |
| 4    | 1    | A 941937 00                | KIT EL VT Motor Clutch                               |

Hydraulic motor

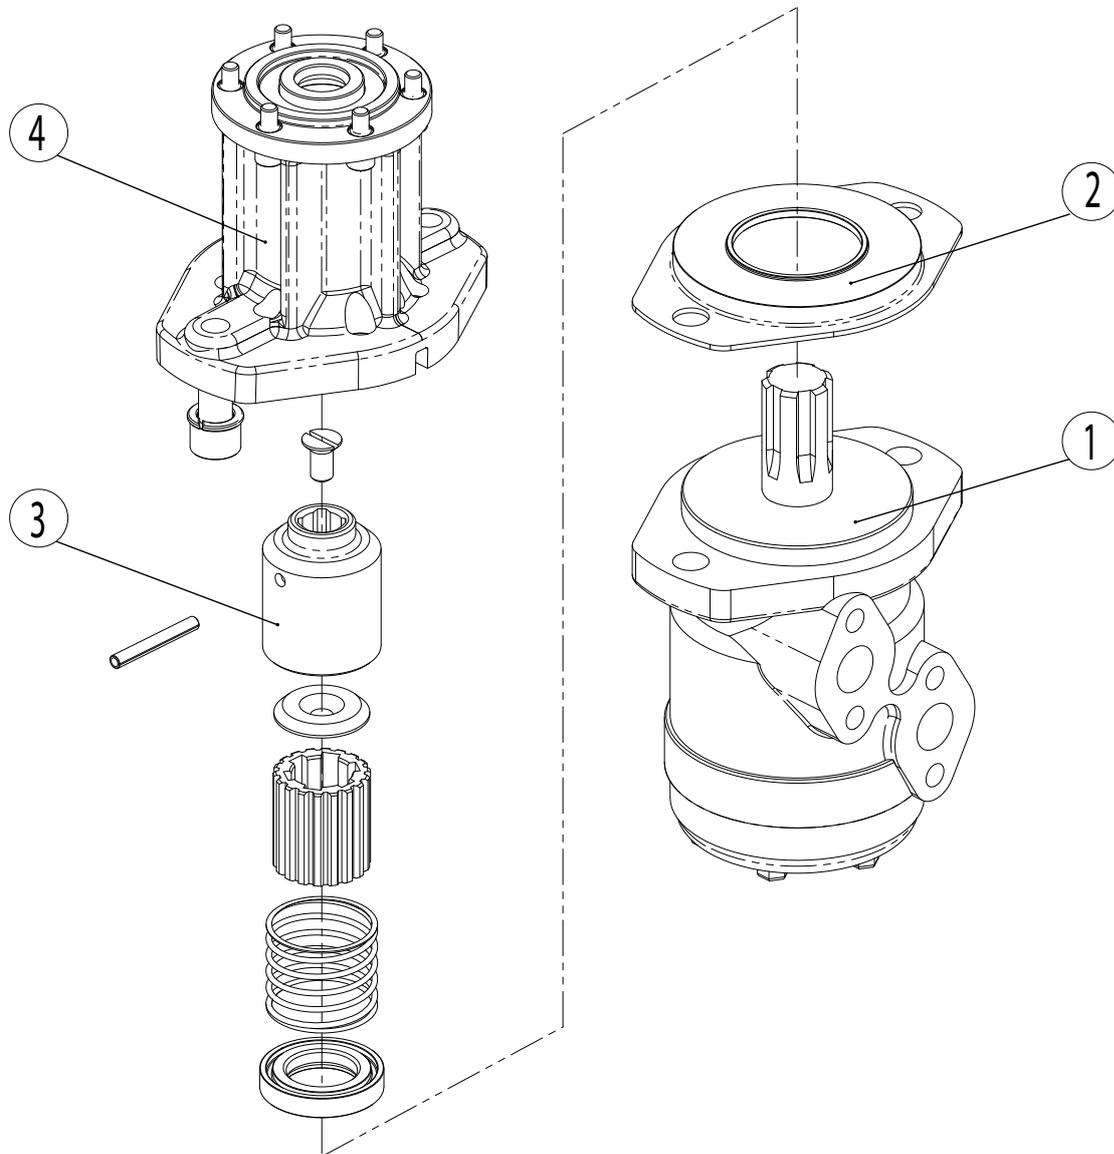

| Pos. | Q.ty | Code          | Description                                  |
|------|------|---------------|--|
| 1    | 1    | G45942000Y    | Hydraulic motor 'OMR50 151-0420 alb.scan. 1" |
| 2    | 1    | S 41500 00 82 | Hydraulic Motor Spacer                       |
| 3    | 1    | A 941932 00   | KIT Clutch HY Motor (OMR50)                  |
| 4    | 1    | A 941491 00   | KIT HY Motor Flange (OMR50)                  |